



Time & date change instructions for: '86' Clipper

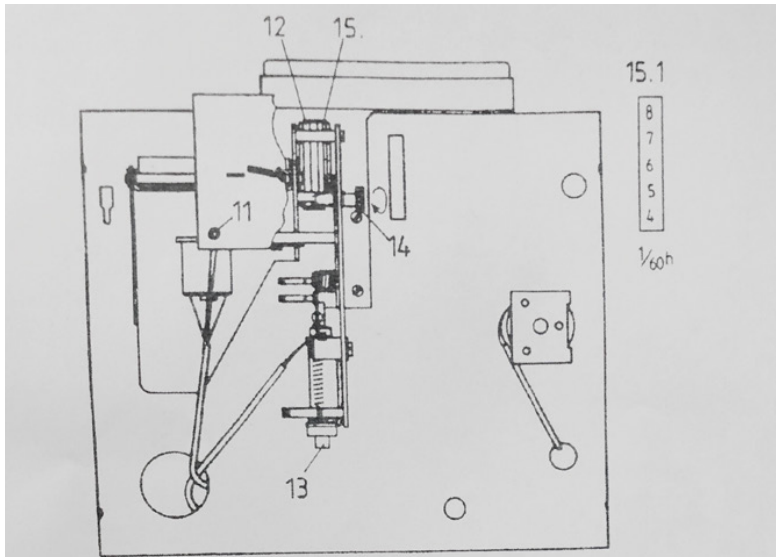


Fig. 4

5. Setting the time (dial and printing block) (fig. 4)
 Lift solenoid plunger (13) and turn setting wheel (14) in sense of arrow to the desired time
 A single actuation of the solenoid plunger (13) advances the time on the dial as well as on the printing block (type wheel 15.1) by 1 minute.

6. Setting the week day (fig. 4)
 Set type wheel (12) by means of a pointed tool (e.g. ball pen or screw driver).



Caution!
 In order to avoid malfunctions do not reverse day type wheel.

7. Replacement of fuse (fig. 2)
 Take off cap of fuse holder (16) and replace apparatus fuse (for fuse rating, see technical specifications). Replace the cap and lock it.



All our support personnel are fully trained and based in the UK. As a company we are ISO27001 accredited.

Support benefits

- ✓ UK based support experts
- ✓ Unlimited calls
- ✓ Priority support
- ✓ Peace of mind
- ✓ Online Remote Support

What it covers

- ✓ Troubleshooting
- ✓ Configuration advice
- ✓ Shift/rules set up assistance
- ✓ Transaction queries
- ✓ Reporting issues

To get support

Call us on
01908 281 000



01908 281000
 info@timesystemsuk.com
 www.timesystemsuk.com

Time Systems (UK) Ltd, Systems House,
 Newport Road, Wavendon, Milton Keynes, MK17 8AA