 





Time & date change instructions for: AcroPrint 3300N


a. Open the lid, the LCD displays P1.



 
b. Press F3 button.



 
c. Press the + or - button to change the card type and press the "E" button. If it is not necessary to change the type, press the "E" button.



 d. Press the + or - button to change the minute indication and press the "E" button. If it is not necessary to change it, press the "E" button.



 e. Press the + or - button to change the day of the week indication and press the "E" button. If it is not necessary to change it, press the "E" button.




f. The LCD goes off, the setting is completed. Close the lid. If required, other settings can be performed before closing the lid.

(4) Setting summer time


To set or delete summer time, 2 groups must be set simultaneously. Set group 1 to start summer time, group 2 to end summer time. The starting and ending time may be set to any "HOUR" between 0 AM and 9 AM.

Example:
Starting date and time: April 1, 02:00
Ending date and time: October 1, 02:00

 
a. Open the lid, the LCD displays P1.



 b. Press F4 button.



 c. Press the + or - button to change the hour to 2 and press the "E" button. If it is not necessary to change it, press the "E" button.



Support benefits

- ✓ UK based support experts
- ✓ Unlimited calls
- ✓ Priority support
- ✓ Peace of mind
- ✓ Online Remote Support

What it covers

- ✓ Troubleshooting
- ✓ Configuration advice
- ✓ Shift/rules set up assistance
- ✓ Transaction queries
- ✓ Reporting issues

To get support

Call us on
01908 281 000



All our support personnel are fully trained and based in the UK. As a company we are ISO27001 accredited.



01908 281000
info@timesystemsuk.com
www.timesystemsuk.com

Time Systems (UK) Ltd, Systems House,
Newport Road, Wavendon, Milton Keynes, MK17 8AA