 





## Time & date change instructions for: Amano Pix 3000

1. After entering the program mode, or if you are already there, move the prompt under "YEAR,MONTH,DATE".



2. Press "ENTER" to start the sequence.

 
3. Press "CHANGE" until the correct year appears, then "ENTER".




4. Month will start flashing, press "CHANGE" until the correct month appears, then "ENTER".



 5. Date will start flashing, press "CHANGE" until the correct Date appears, then "ENTER".



 6. The whole display will begin flashing, if correct press "ENTER". If incorrect press "CHANGE" return to step 3.



### HOUR AND MINUTE (TIME)

1. After entering the program mode, or if you are already there, move the prompt under "HOUR, MINUTE".

 


2. Press "ENTER" to start the sequence.

3. Press "CHANGE" until the correct hour appears, then "ENTER".



4. Minutes will start flashing, press "CHANGE" until the correct minutes appears, then "ENTER".



5. The whole display will begin flashing, if correct press "ENTER". If incorrect press "CHANGE" return to step 3.



## Support benefits

- ✓ UK based support experts
- ✓ Unlimited calls
- ✓ Priority support
- ✓ Peace of mind
- ✓ Online Remote Support

## What it covers

- ✓ Troubleshooting
- ✓ Configuration advice
- ✓ Shift/rules set up assistance
- ✓ Transaction queries
- ✓ Reporting issues

## To get support

Call us on

**01908 281 000**



01908 281000

info@timesystemsuk.com

www.timesystemsuk.com

Time Systems (UK) Ltd, Systems House,  
Newport Road, Wavendon, Milton Keynes, MK17 8AA