 
 
 




## Time & date change instructions for: Seiko 120

### Setting the Time

today, press the [D/M] key and select "10" (see ② left).

 
 


- 1 Press [SELECT] and set the ▲ mark to [TIME].
- 2 To change the hours, press [M/H] and select the desired hours (the seconds are automatically reset to 00).
- 3 To change the minutes, press [D/M] and select the desired minutes.
- 4 Press [SET] after checking the desired time appears on the display.  
The seconds are 0. Press [SET] accordingly to a time signal. The unit is now set to the correct time.

NOTE: To adjust the seconds, put the ▲ mark to [TIME], and press [SET]. This resets the seconds to 0.

10

### Setting the Date



- 1 Press [SELECT] and set the ▲ mark to [DATE].
- 2 To change the year, press [Y/FUNC] to display the desired year.
- 3 To change the month, press [M/H] to display the desired month.
- 4 To change the day, press [D/M] to display the desired day.
- 5 Press [SET] after checking the desired date appears on the display.



## Support benefits

- ✓ UK based support experts
- ✓ Unlimited calls
- ✓ Priority support
- ✓ Peace of mind
- ✓ Online Remote Support

## What it covers

- ✓ Troubleshooting
- ✓ Configuration advice
- ✓ Shift/rules set up assistance
- ✓ Transaction queries
- ✓ Reporting issues

## To get support

Call us on  
**01908 281 000**



01908 281000  
info@timesystemsuk.com  
www.timesystemsuk.com

Time Systems (UK) Ltd, Systems House,  
Newport Road, Wavendon, Milton Keynes, MK17 8AA